


Breezeline Stream TV Remote Essentials

Your Breezeline Stream TV Remote

The Fast Forward, Rewind, and Pause/Play functions will appear on your TV screen. Use the middle buttons (OK/Select, LEFT, RIGHT) on your remote control to operate those on-screen functions while watching video.

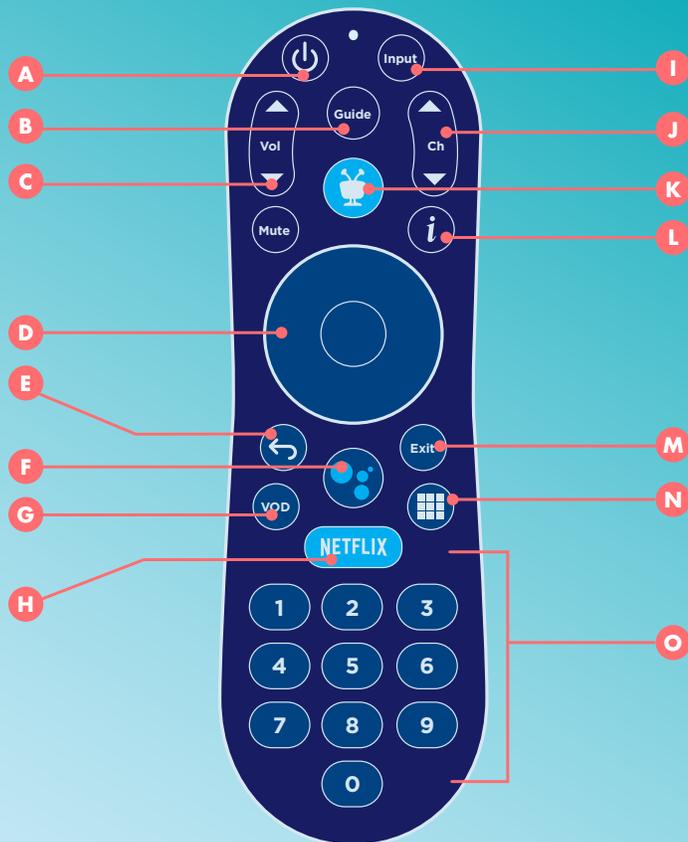

- A** POWER turns the television on/off.
- B** GUIDE takes you to the program guide.
- C** VOL and MUTE control the TV audio.
- D** While navigating the TiVo menus:
 - Use UP, DOWN, LEFT, or RIGHT to move around the screen.
 - The center button (OK/Select) chooses menu items.
 - While watching video:
 - DOWN displays the Info banner.
 - UP opens the mini guide.
 - OK/SELECT brings up Trick Play controls. With Trick Play controls visible:
 - DOWN opens the Continue Watching and Favorite Channels panels.
- E** BACK starts full-screen video on the Home screen, and goes back to the previous screen on other menus.
- F** Press and release the Google Assistant button to talk to Google.
- G** VOD goes directly to the On Demand library.
- H** The NETFLIX button launches Netflix.
- I** INPUT changes your video source (TiVo device, gaming, etc).
- J** CH UP/DOWN changes the channel or moves you quickly through the lists and the guide.
- K** The TiVo button takes you to the Home Screen.
- L** INFO (**i**) brings up the full Info banner while watching a show with options to Record, Bookmark, Change Audio Track, etc.
- M** EXIT switches to full-screen video while using TiVo menus, or jumps back to the LAST CHANNEL viewed while watching live TV. Exit also exits a Start Over/Catch Up show.
- N** The grid button jumps to the Apps & Games screen.
- O** The NUMBER BUTTONS make it easy to enter numbers (e.g., channel numbers or Parental Controls PIN).



Installing Stream TV for the First Time (new box, new remote)

1. You should see the screen below during First Time Installation (FTI).
2. Press the TIVO button to start the pairing process.
3. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.



Re-pairing your Remote to your Stream TV box (existing box, existing remote)

1. If for any reason your remote becomes unpaired, press the TIVO and BACK buttons simultaneously until the indicator light turns RED.
2. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.
3. If a list of remotes appears on the screen, use the directional pad to highlight the remote and press OK/SELECT to choose the remote and pair it.

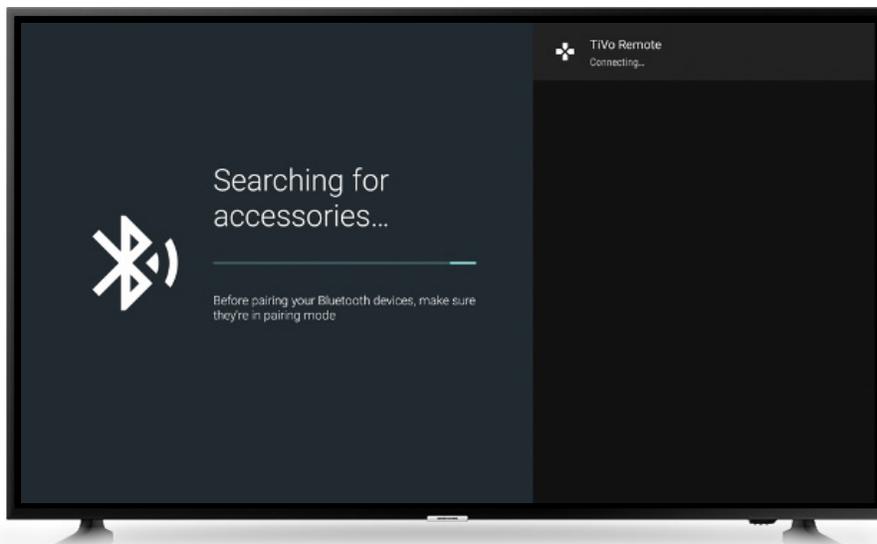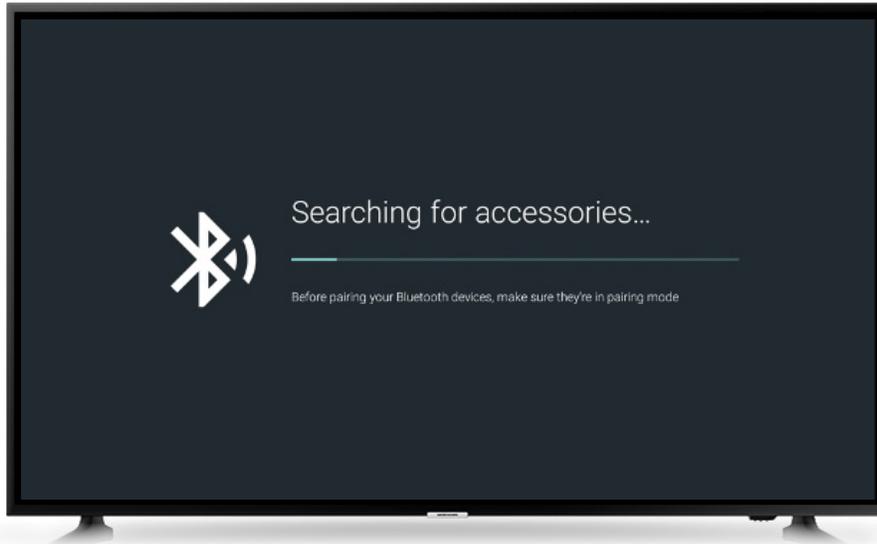

Reset & Re-Pair Your Remote

1. Press and hold the TIVO and POWER buttons on the remote simultaneously for approximately 3 seconds, until the activity light turns solid red. Note: If you don't press the buttons exactly at the same time, you may see the activity light flash yellow or yellow/red instead. Try again after the light stops flashing.
2. Press VOLUME DOWN three times.
3. Press the TIVO button.
4. The activity light will flash red three times.
5. Remove the batteries from the remote for at least 10 seconds.

The remote is now reset and can be paired with your Stream TV box

6. Insert the batteries into the remote.
7. Press the TIVO button to start the pairing process.
8. The indicator light will blink amber/yellow slowly while it searches for the Stream TV box. It will then blink amber/yellow quickly 5 times when pairing is successful.



Controlling your TV power and volume with your Stream TV Remote

1. Go to Menu > Settings > Remote Settings > Remote Control Programming
2. Choose "Set up TV" and choose your TV manufacturer from the list (the channel up/down buttons can be used to scroll faster)
3. Follow the on-screen instructions to begin testing code #1
4. If code #1 works, you're done! Otherwise, try additional codes until you find one that works for you.

Note: If you notice odd behavior after programming the remote, you can always go back to this screen and select "No, try next code" and try a different code.



**Thanks for
Choosing Breezeline**

