

# Ultra TV

## Quick Reference

### Guide to the Ultra

#### TV Entertainment

##### Experience

# Ultra TV Remote Control



- A** Controls TV and/or Audio Device Power
- B** Changes Input on TV
- C** **A** button lists Recorded Shows
- D** Displays Menu Options
- E** Brings up Viewing Guide
- F** Go to Previous Page
- G** Rewind Last 7 Seconds
- H** Skips Ahead in Buffered or Recorded Content
- I** Changes Channels and Pages in the Grid and Menu
- J** Changes TV or Receiver Volume
- K** Deletes Character during Text Entry or Removes Flip Bar
- L** **C** button displays Grid Guide
- M** Live or **D** button returns to Live TV
- N** Directly Accesses Netflix
- O** Exit takes you back to where you were previously
- P** Displays Program Information
- Q** Navigates Menu and Guide Options
- R** Selects Menu Options and Programs from the Guide
- S** Goes to Next Page. Skips Ahead 30 min when in the Guide
- T** Search for Programs
- U** Controls Live and Recorded TV, Other Content
- V** Mute Audio On and Off
- W** Directly Tune to Channels
- X** Takes you to Channel Last Viewed

# Smart Menu and Category Cards

To access the Smart Menu, press the MENU button on the remote. Use the left and right arrows on the remote to browse the category cards.



## Channels

View all available channels



## Search

Search for programs by title, keyword, or category across all available content



## Settings

Customize your experience



## Recorded TV

View all of the programs you've recorded



## Sports

View all available sports programming



## Kids

View all children's programming



## News

Find all of the news channels and current news programming, including live TV and recorded TV



## Favorite Channels

Create a list of your favorite channels for easy access



## Movies

View all available movies including those in live TV and recorded TV.

# NETFLIX

## Netflix

Instantly access your Netflix account without switching inputs on your TV



## Apps

Access other applications like YouTube and Pandora right on your TV



## Controlling Live TV

Control how you watch live TV - Pause, rewind or fast-forward like you would a recorded program.

- Press PAUSE to alternate between pausing and resuming the show you are watching.
- Press REWIND up to three times (for three speeds) to rewind the show.
- Press FORWARD up to three times (for three speeds) to fast-forward the show up to the point of broadcast.
- Press PLAY to stop fast-forwarding or rewinding or resume from a pause.
- Press LIVE to go to the point of broadcast of the last channel you watched.
- Press REPLAY to view the previous seven seconds of the show.
- Press SKIP to skip forward in the show up to the moment of broadcast. You can set how many seconds to skip with this button on the Settings menu.
- Press PAUSE and then FORWARD once to activate slow motion.
- Press RECORD to record the program you are watching, including the entire contents of the temporary memory or buffer for the show you are watching.
- BACK moves a list displaying TV programming back to the previous half hour. Also, pages back through an info note.
- NEXT moves a list displaying TV programming forward to the next half hour. Also, pages forward through an info note.
- Press PAUSE and then SKIP to advance forward one frame.

## Recorded TV

### Managing Recorded TV

The Recorded TV category lists all your recorded shows in alphabetical order. Episodes of a series are grouped into folders and individual episodes are seen in the preview panel to the right.

#### The recorded show icons let you know the following:

-  The show is recording right now
-  The show is scheduled to record
-  The show is recorded and may be deleted when space is needed
-  The show is recorded and will not delete unless deleted manually

#### The Options card in the Recorded TV category lets you manage your recorded TV

- Scheduled to Record in Options lets you see all the programs that are set to record. Here you can also cancel a recording or alter your recording settings for each show. Just pick the show you want to manage and press the INFO button.
- Recording Defaults in Options lets you determine your default preferences for how long to keep a recording, how many episodes to record, when the recording starts and stops, and whether to record first runs or repeats.

## How to set a recording & series recording

**When watching a show:** To record the show you are currently watching press **RECORD** and the show will begin recording. If you are watching a show and want to record the series, press **INFO**. Then select “**Record Series**.” A red dot means the program is recording.

**Via the Search category:** You can search for the show in the Search category by title, keyword or category. Select the show in the results by pressing **OK** and then select “**Record Once**” or “**Record Series**” in the action menu. A blue dot means the program is scheduled to be recorded.

**In TV Channels category:** You can scroll through the TV channel lineup. When you find a show that is in progress that you want to record either in the listing or in the preview panel, press **RECORD**. If you want to record an upcoming show, press **INFO**. An action menu will appear where you can select “**Record Once**” or “**Record Series**.” A blue dot means the program is scheduled to be recorded.

## Automatic Conflict Management

You can record or watch up to six shows at once. A conflict detection note will pop up if you are already using all six tuners – which means that you may be recording five shows and watching Live TV. If this happens, an action menu will show up automatically on the screen giving you options to choose which recordings you want to keep.

## How to Delete a Recording

Press the “**A**” button, and then use the arrow buttons to highlight a recording. Press the “**Info**” button to bring up options and again use the arrow button to highlight the “**Delete**” option. Press the “**OK**” button twice to confirm your selection.

## How to Cancel a Live Recording

Press the “**A**” button, and then use the arrow buttons to highlight a recording. Press the **INFO** button to bring up options and again use the arrow button to highlight the “**Stop Recording**” option. Press the “**OK**” button to confirm your selection, and then highlight “**YES**” when presented, then press the “**OK**” button.

# How much space is left on my DVR to record shows?

The Storage Meter lets you know how much space you have left to record more programs. It's located in two places in the Smart Menu. In Recorded TV, the Options card displays the amount of space remaining. In Settings, select the Recording Space card.

# Favorites

You can create a channel lineup of only your favorite channels.

To Add A Channel To Your Favorites:

- In the TV Channels category, tune to the channel you want to add and press INFO.
- Choose "add item to favorites."
- You can delete a channel by selecting the channel and choosing "remove from favorites."

Browse your Favorites channel lineup by selecting the Favorites category card. You can clear the entire favorites list by selecting the Options card in the Favorites category, then choosing "clear all" from the action menu.

## Ultra TV Easy Access

### Whole-Home HD DVR

#### 6 HD Tuners

Record 6 HD shows at one time.

#### Multi-Room Solution

Start a recorded show in one room, pause it and then continue watching it in another room.

#### Easily Setup Recordings

Whether a movie, show or whole series, easily program your DVR with the Smart Menu. You can even change your settings after a show has started to record.

#### Lots of Storage

The 500GB hard drive lets you store up to 300 hours of SD programming or 75 hours of HD programming. The storage meter is easy to check to see how much you have recorded.

#### Automatic Conflict Detection

The system will let you know if you have a conflict that would impact your ability to record an upcoming show.

### Smart Menu

#### TV Categories

View upcoming programs for Movies, Kids, News or Sports with programming listings for live TV and recorded content, specific for those categories.

#### Search

Search for a program by keyword, title or category across all live TV and recorded content.

#### Flip Bar

Allows you to view information on what is playing, what shows are coming or set a recording all without having to change the channel.

#### Live TV Controls

Pause, play or rewind live TV. Watch a show on live TV, pause it, and continue watching from where you left off in another room.

- Favorites** Set up a custom channel lineup, showing only the networks that you want to see.
- Customize TV Listings** Hide channels that you don't want to show up in your main TV channels listing.
- Grid Guide** View listings with the Smart Menu or with a Grid Guide view.

## Ultra Additional Features

- Parental Controls** Set controls so certain shows require you to enter a PIN to watch
- Netflix** Netflix subscribers can stream their favorite TV shows and movies instantly on their Ultra TV set top box. Simply log in with your existing Netflix account or sign up for a free trial and begin watching your favorite shows and movies without having to change inputs on your TV. Netflix streaming membership is required.
- Pandora** We know how useful it is to have Pandora right at your fingertips on all of your other devices. That's why we've made it simple to access your Pandora account at any time!
- YouTube** With instant access to YouTube on Ultra TV you can see what the world is watching – from the hottest music videos to what's popular in gaming, fashion, beauty, news, learning and more.



**Thanks for  
Choosing Breezeline**

